

 


# Fuji GX680 Stitching Back Adapter

Please read these instructions before using this adapter.

The Kapture Group Fuji GX 680 Stitching Adapter enables the stitching of 2 images in landscape or portrait orientation. A center detent for single image capture is also provided.

## Stabilizing bar

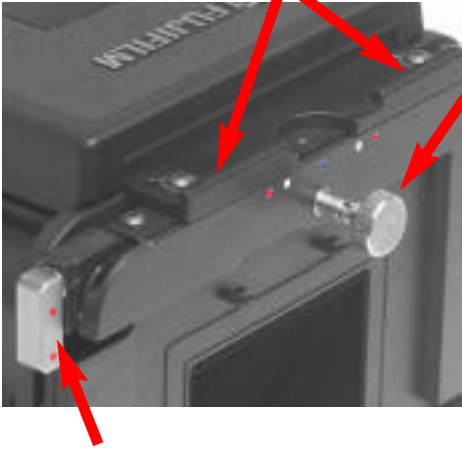

When stitching, you must first pull the **detent release knob**. After the sliding plate starts to move you may release it. It will automatically drop into the selected detent. Make your first capture and then pull the release knob again and slide the adapter plate to the opposite side until it locks in place.

The **overlap selector** rotates 180 degrees with red dots on one side and white dots on the other. These dots correspond with the red or white dots on the adapter plate. If you are using a 4x4 or 5x4 chip select the red dot. When using a 2x3 chip select the white dot for portrait shots and the red dot for landscape imaging.



## Center lock

### Mounting the Fuji stitching adapter

The stabilizing bar must be retracted before attaching or rotating this adapter. Simply pull both ends of the stabilizing bar back fully. Next, align the rotating back as shown in the photo above. Rotate the stitching adapter to the desired orientation. Push both ends of the stabilizing bar toward the Fuji camera body until it is snug. When the detent release knob is at the 12 o'clock position you are in the landscape mode. Rotating the adapter plate another 90 degrees clockwise puts you in the portrait mode.



## Landscape stitching



## Portrait stitching

Kapture Group Inc.  
6319 Groban  
Osage Beach, MO 65065

 
 
 
 
 
 
 
800 879 4955  
573 302 1969  
573 302 1415 fax

[www.kapturegroup.com](http://www.kapturegroup.com)  
[support@kapturegroup.com](mailto:support@kapturegroup.com)



# Fuji GX680 Stitching Back Adapter

## Masking Options

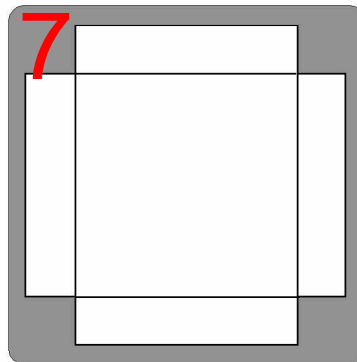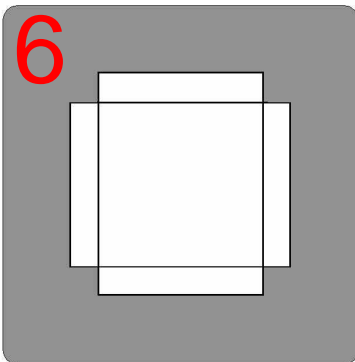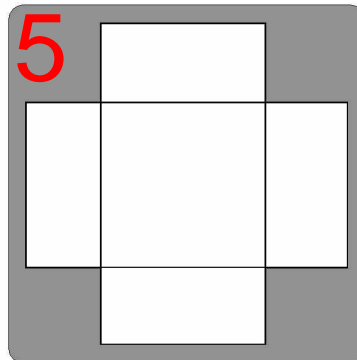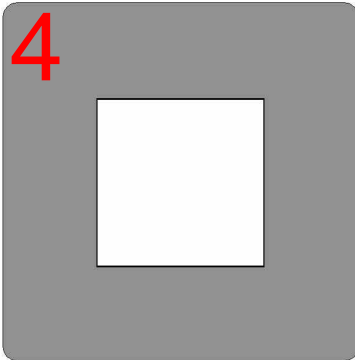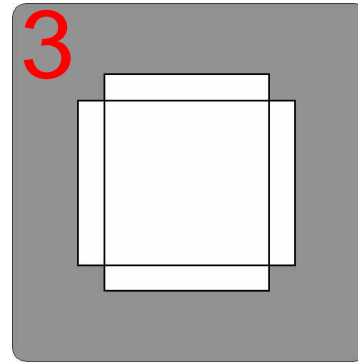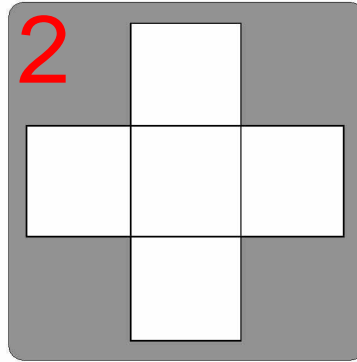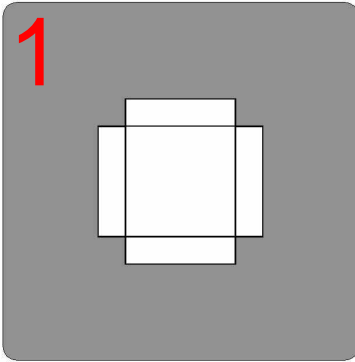

**1:** 2x3 non-stitching

**2:** 2x3 stitching - landscape mounted chip

**3:** 2x3 stitching - portrait mounted chip

**4:** 4x4 non-stitching

**5:** 4x4 stitching

**6:** 5x4 non-stitching

**7:** 5x4 stitching - portrait mounted chip

**Please note:** Most digital backs have 2 sets of Hasselblad mounting clips. This allows the back to be mounted in either the portrait or landscape orientation. Landscape mounted chips and portrait mounted chips refer to the digital back's orientation relative to the Hasselblad mounts on the Fuji Stitching Adapter.

Kapture Group Inc.  
6319 Groban  
Osage Beach, MO 65065

800 879 4955  
573 302 1969  
573 302 1415 fax

[www.kapturegroup.com](http://www.kapturegroup.com)  
[support@kapturegroup.com](mailto:support@kapturegroup.com)